





No Power or No Display on Kitchen Minder:

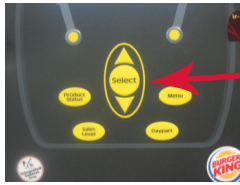

A. Press Select Key on Kitchen Minder

- Verify that the Kitchen Minder Beeps then proceed to step B
- If No beep proceed to step C

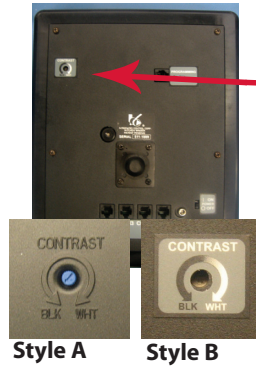

B. Adjust Contrast

- Warning:
DO NOT USE ANY FORCE WHILE ADJUSTING CONTRAST

- Locate the contrast adjust hole on the back of the Kitchen Minder
- Observe the style of adjustment

Style A – Blue shaft with slot for small flat blade screw driver

Style B – Shaft not visible Use small Philips head screw driver

- Slowly adjust clockwise and observe the Kitchen Minder Screen darkens and text appears
- If text does not appear contact ICC for support.




C. Check Kitchen Minder Power

- Verify the ON/OFF switch is in the ON position
- Inspect the Power Jack and Verify it is not loose or broken


D. Check Receptacle Power

- Locate the power outlet that the Kitchen Minder is plugged into.
- Plug a different appliance into the same outlet
- Verify there is power to the receptacle
- If no power check breakers or call maintenance
- If receptacle is working proceed to step E

E. Remove Cables

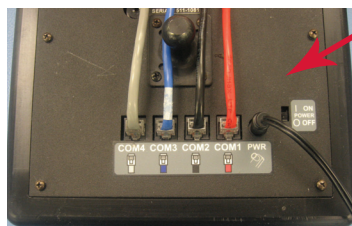

- At the back of the Kitchen Minder unplug the Red Black, Blue, and Grey cables as shown
- Turn off the Kitchen Minder then back on again.
- If the Kitchen Minder turns on, plug in each cable one at a time
- Verify the power does not go off after each cable is plugged in
- Proceed to step F if the power goes off

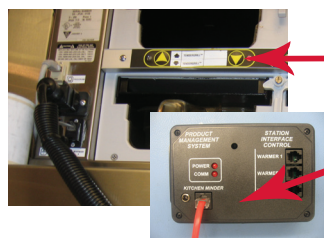

F. Remove Cable from Warmer or Box

- Trace the cable to the Main or Specialty warmer or external black box
- Remove the cable from the black box or back of warmer
- Verify the power comes back on
- If the Power does not come back on Replace the Cable
- If the Power does come back on Replace the black box